Aerial Glo SEG Display

Product Parts

- 1.Top
- 2. Bottom
- 3. Left & Right Side
- 4. Ceiling Anchors & Screws
- 5. Chain With Clips (x2)
- 6. Ceiling Hanging Bracket (x2)
- 7. Graphic Installation Tool
- 8. Graphic
- 9. Power Cord
- 10. Soft Case





Step 1

Assemble Top (1) and Bottom (2) to Left and Right Side (3) by matching the stickers located on the frame.



 


Step 3
Attach Chain with Clips
(5) to the hanging
machanisms on the top
of the frame.



Step 2

With hanging mechanisms on top, install Graphic Panels (8) into frame, inserting the graphic's gasket edges into the frame, by inserting each corner into the frames four corners, then work around the frame alternating opposite sides until complete. Loop for removing Graphics (8) will be at bottom corner.




To remove the graphics, pull the loop found on the corner.



Step 4

 Plug Power Cord (9) into the hub located on the top of the frame. To turn Display on or off press button located on the side of the frame.





Step 5

Use Ceiling Anchors & Screws (4), and Ceiling Hanging Brackets (6), to hang display in your desired location and plug into electrical outlet.



Storage & Care