

MB 110E8


Part Number: 195110 321MB 8A


Do Not Use Caster Wheels To Balance Load
Shaft is 1/4" Steel, Will Bend Easily If Load Is Out Of Balance
PERFORMANCE TIPS


- Keep The Unit Level
- Keep The Weight As Centered As Possible

Options:

- 1 RPM Clockwise
- 2 RPM Counter-Clockwise

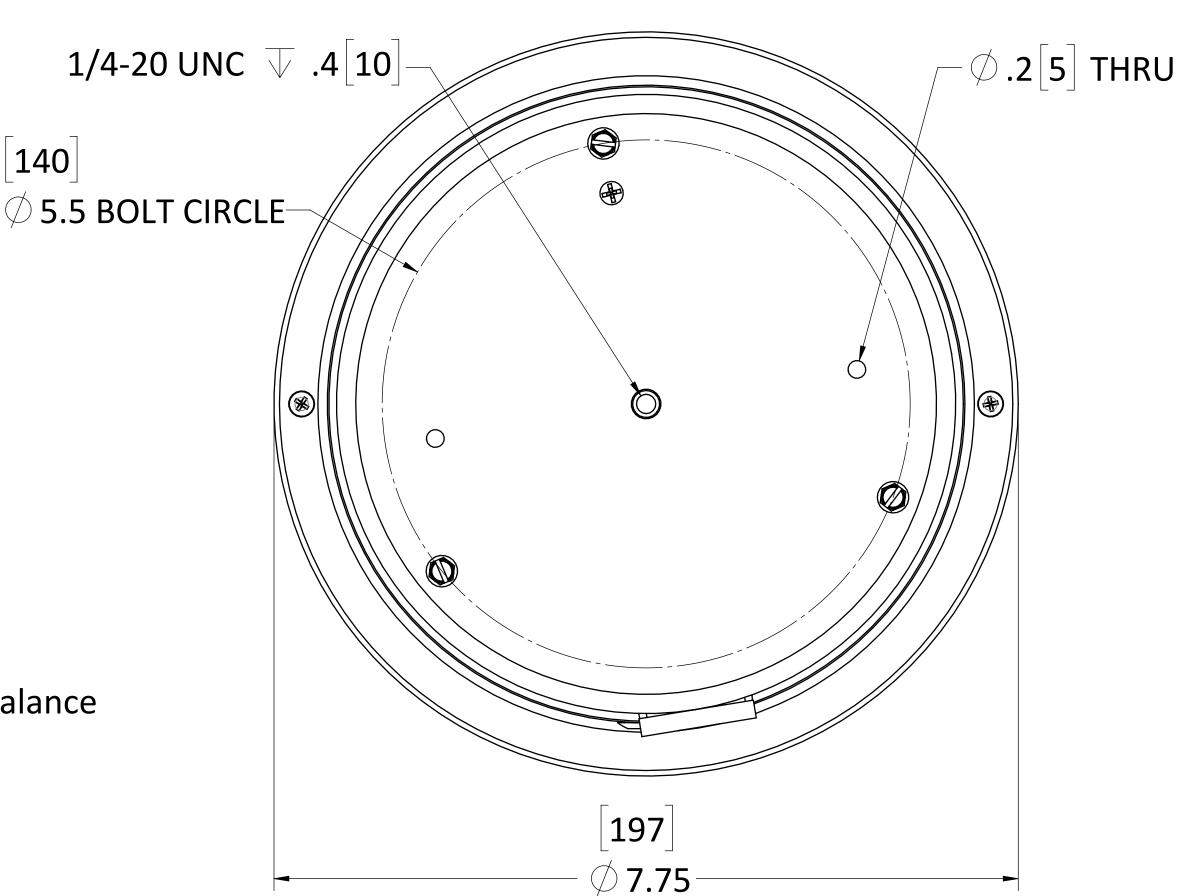

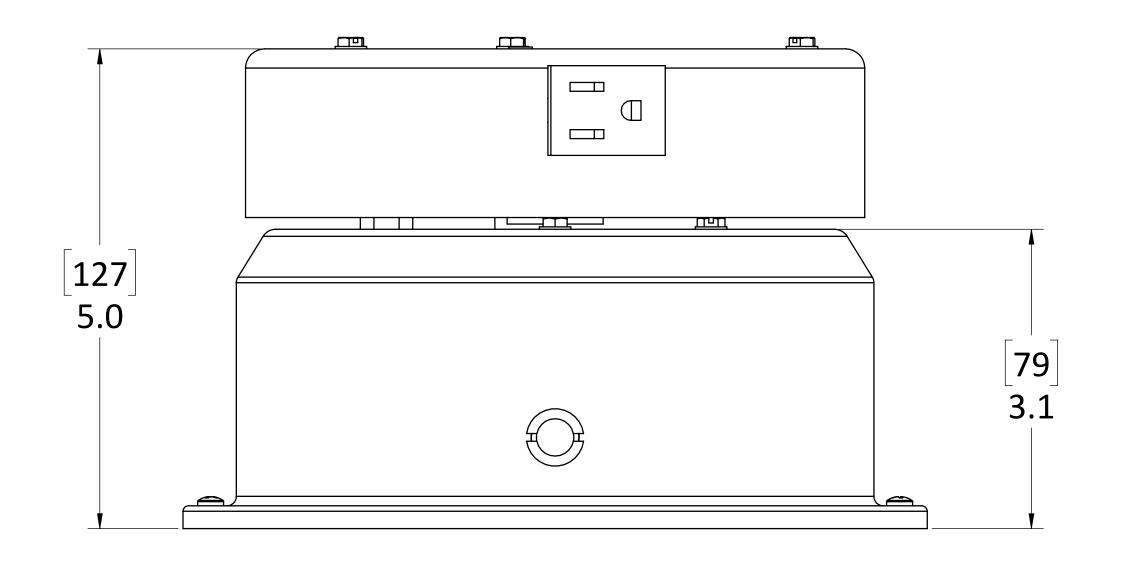

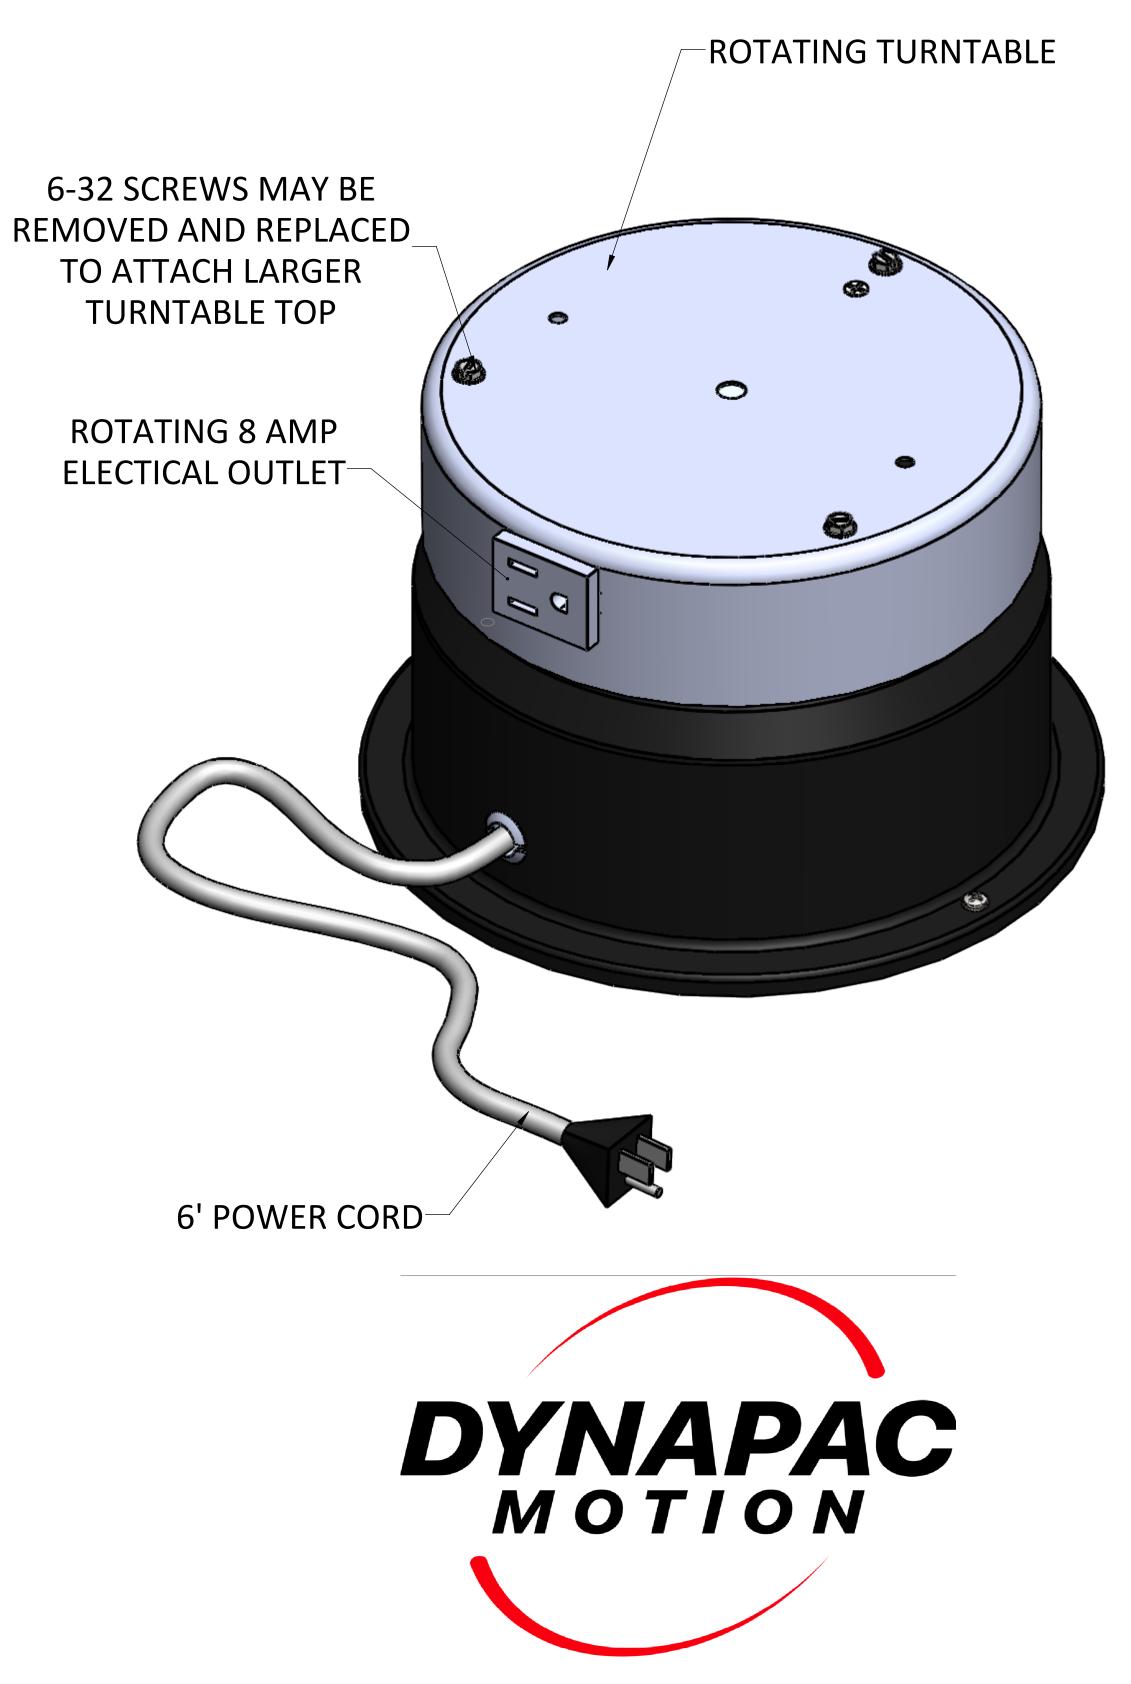

Vue-More powered by Dynapac Motion 338 Hansen Ave., Salt Lake City, UT 84115 Phone: 610-266-9600

email: info@vuemore.com • www.vuemore.com