

Custom Header 57"w x 14"h

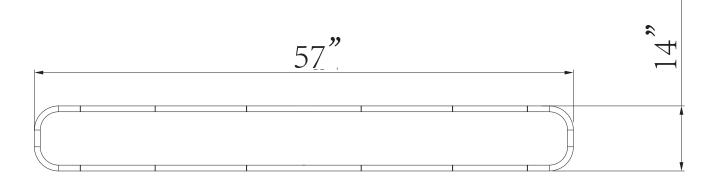

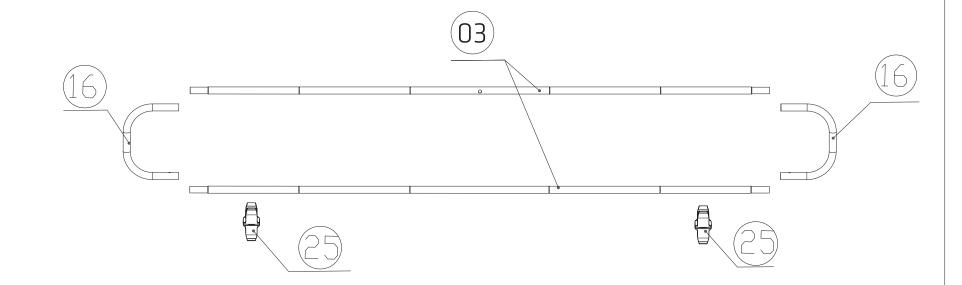

Setup Instructions

- 1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.
- 2. Make sure that all the corresponding numbers are correct.
- 3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.
- 4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.
- 5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.
- 6. To lock the frames together you can use the WL-25 brackets, they are designed tight so they lock well.



Frame		Frame	Frame	Frame	Frame		Frame		TV kit	Shipping Case accessories
									22.6"	CA900
CLEAR 4									32"	CA500
03 2									40"	NYLON BAG
16 2										
NO. Quantity Conf	rm NO.	Quantity Confirm	NO. Quantity Confirm	NO. Quantity Confirm	NO. Quantity	Confirm NO.	Quantity	Confirm	NO. Confirm	m NO. Confirm