


Step 1. Assemble lower counter sections using long knobs.



Step 2. Attach transaction tops using long knobs. **** End sections have 2 inserts on the outside end****

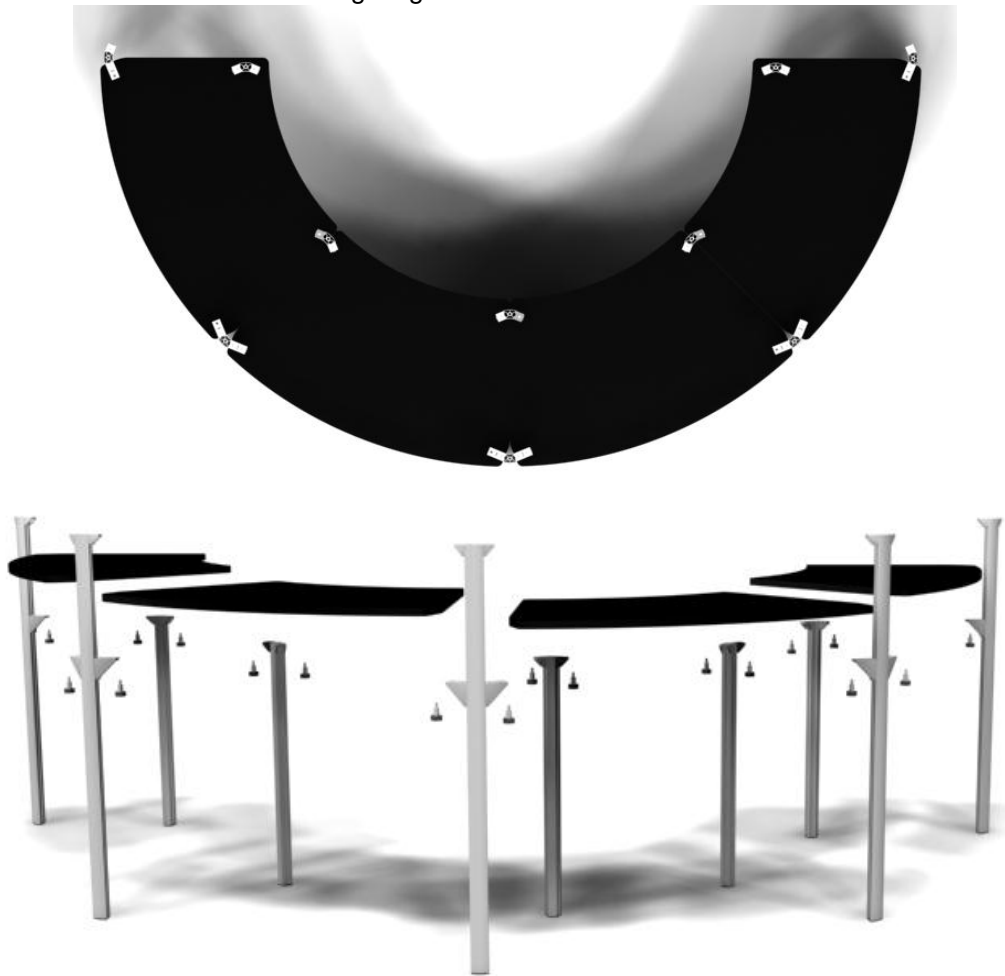

Step 3. Insert infill panels.

