




Step 1. Assemble left & right columns.

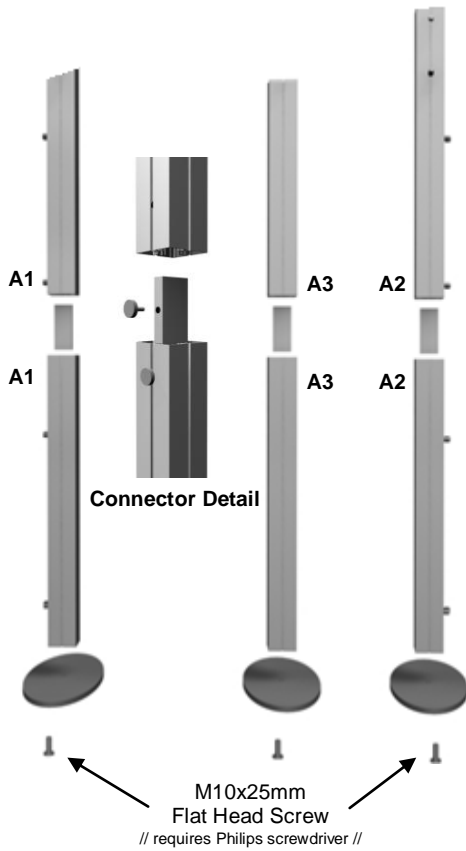

Step 3. Attach canopy cross bars; assemble canopy.

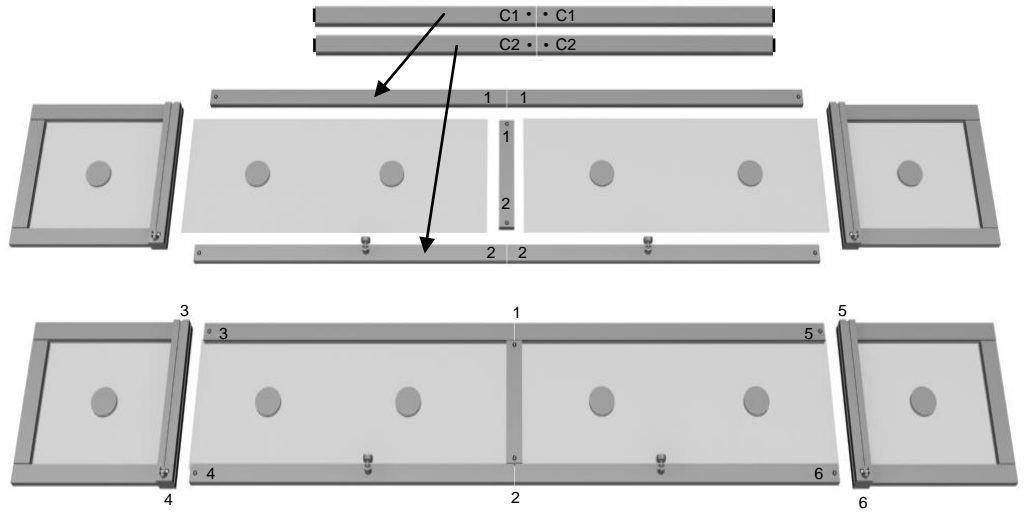

Step 4. Place canopy on columns. Tighten column top CBX clamps using Red/Black handle 5mm hex wrench.

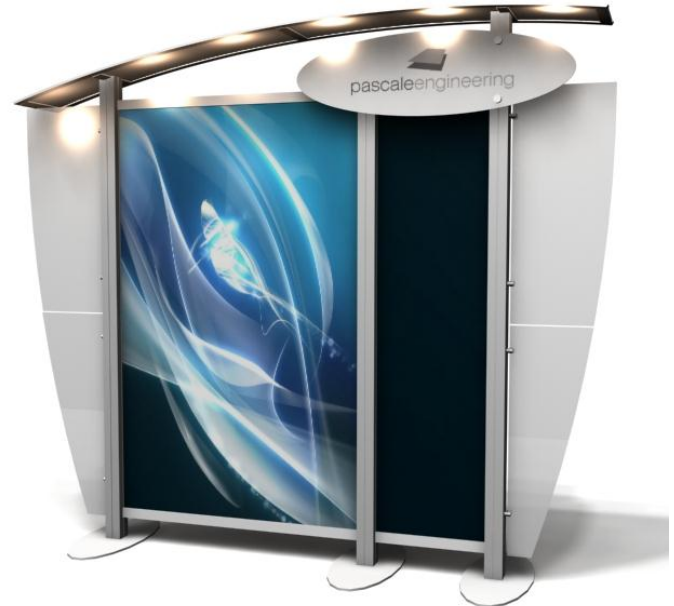

Step 2. Attach cross bars to columns; align with arrow.

// requires 5mm Hex Wrench //

