
Step 3. Attach canopy cross bars; assemble canopy.

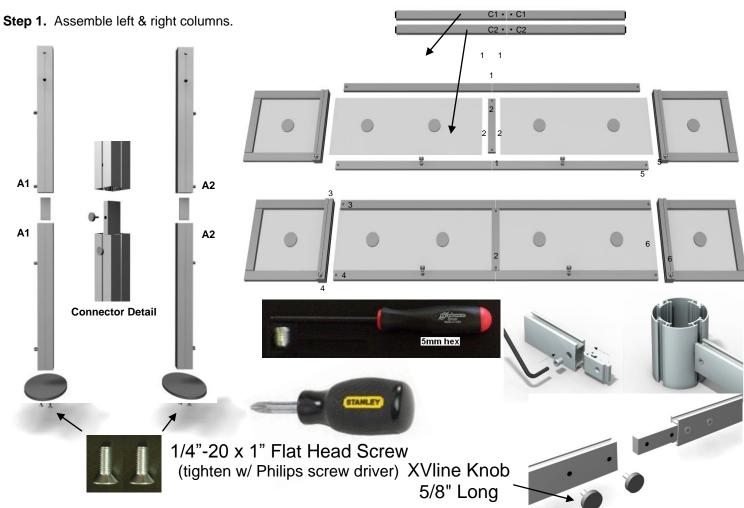

Step 2. Join 2-piece graphic bars together; attach top cross bar to column; align with arrow.





Step 4. Place canopy on columns. Tighten column top CBX clamps using Red/Black handle 5mm hex wrench.




XVIine


// SEG Graphic Insertion //

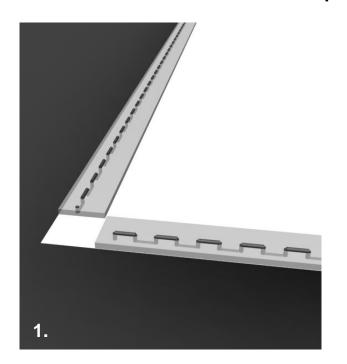

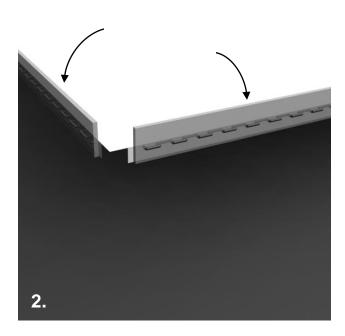

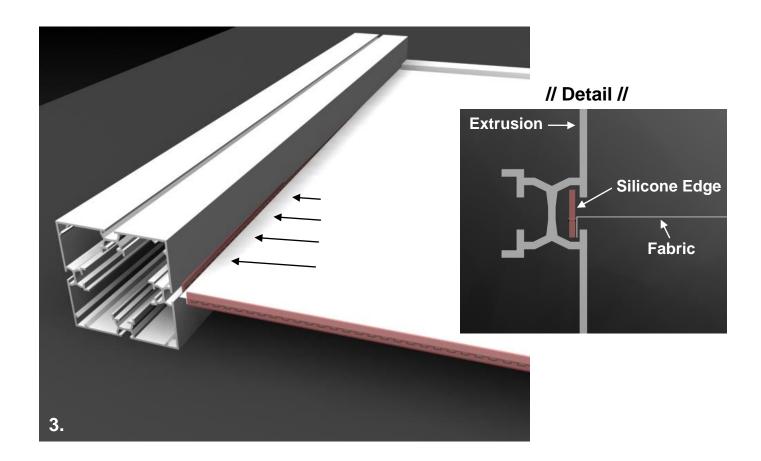



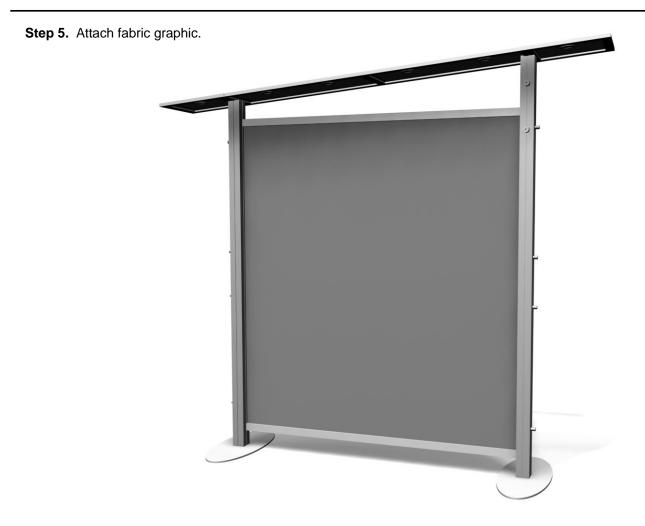

Step 6. Power layout.

