



**Step 1.** Assemble left & right columns.

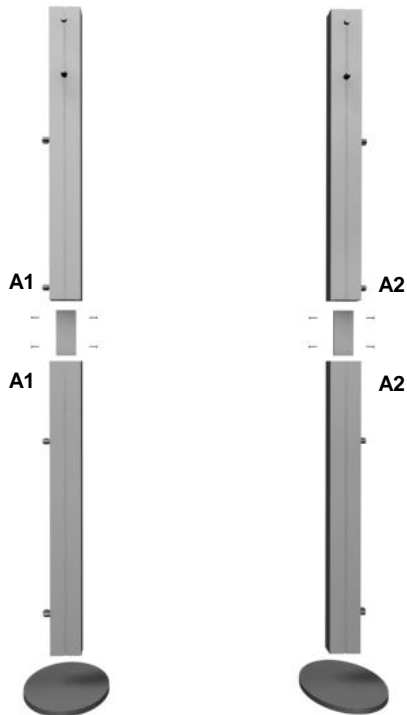

**Step 3.** Attach canopy cross bars; assemble canopy.

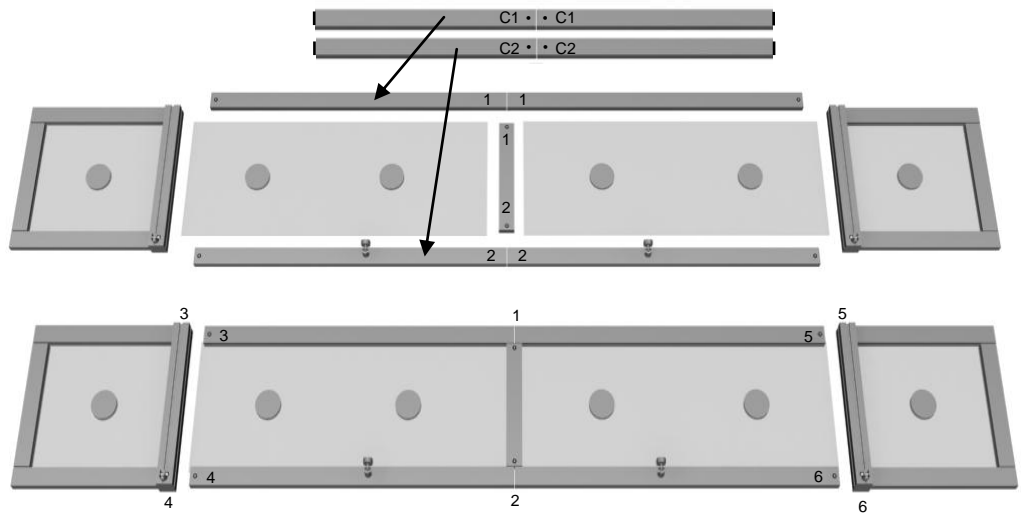

**Steps 4-5.** Place canopy on columns. Tighten column top CBX clamps using Red/Black handle 5mm hex wrench. Attach header using standoff caps.

**Step 2.** Join 2-piece graphic bars together; attach cross bars to columns.

